INSTALLATION GUIDE

Uninsulated roof exit window

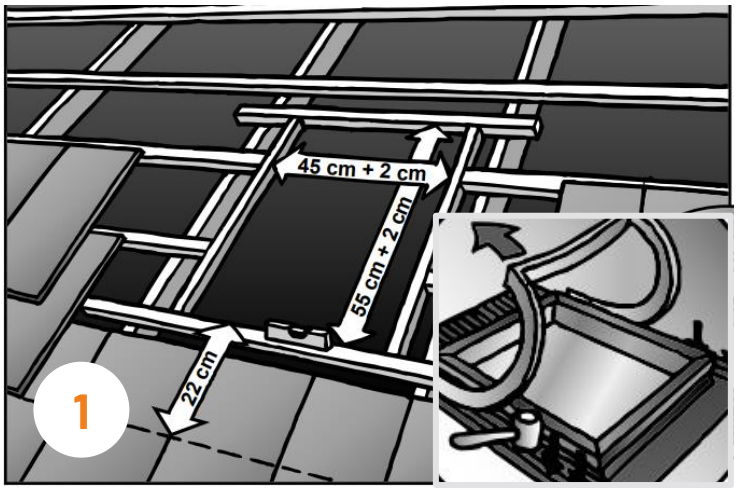

The position of the roof window depends on the tile or roof tile model. The space requirement of the window can be seen in the picture above. Where the roof battens are cutted, an additional supporting counter battens should be installed

The sealing foam is lifted during the installation.

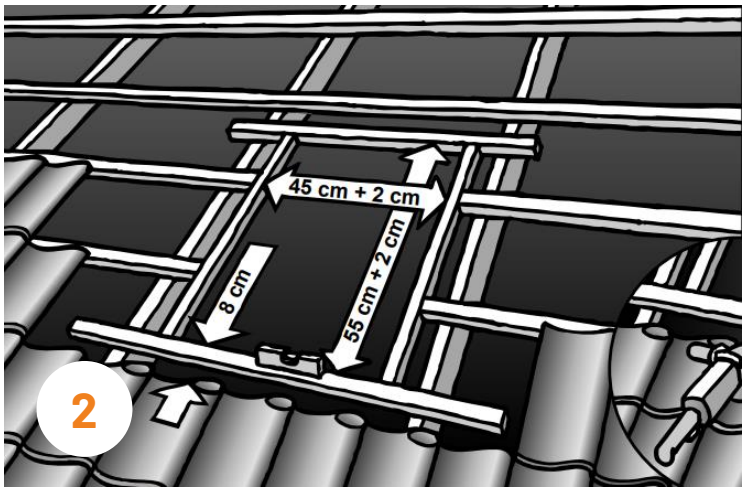

The top of the high profiled tiles below the roof exit window. may be flattend with an angle grinder

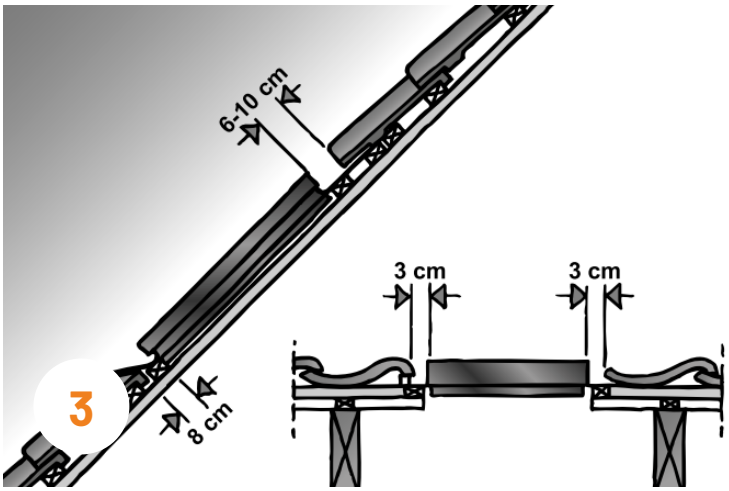

The connecting tiles may be cutted along the sides of the window according to the picture.

The support brackets located under the flashing frame lie on the support slats. With the 4 fastening straps (2 on each side), the roof window is attached to the roof rafters from the inside using 2 screws provided.

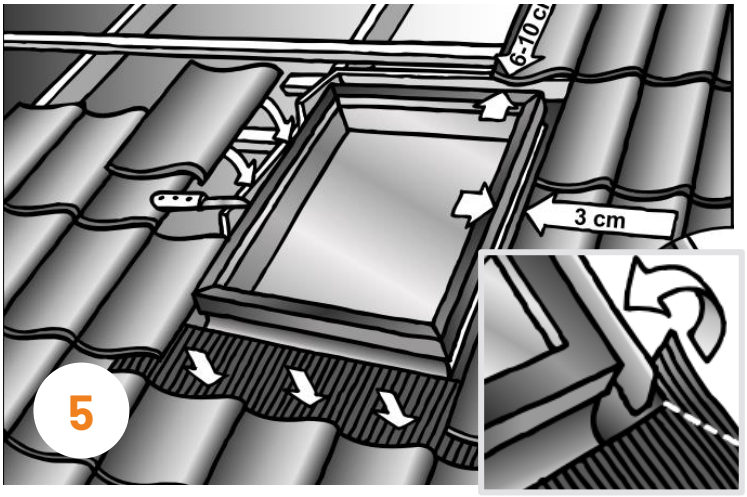

The abutment tape on the flashing frame is adapted to the profile of the tiles. The butyl adhesive tape attached to the underside is glued to the row of tiles underneath. The upper corners of the abutment must be bent accordingly.

The sealing foam can be glued to the flashing frame and if it is neccessary it can be cutted according to the covering roof tile.

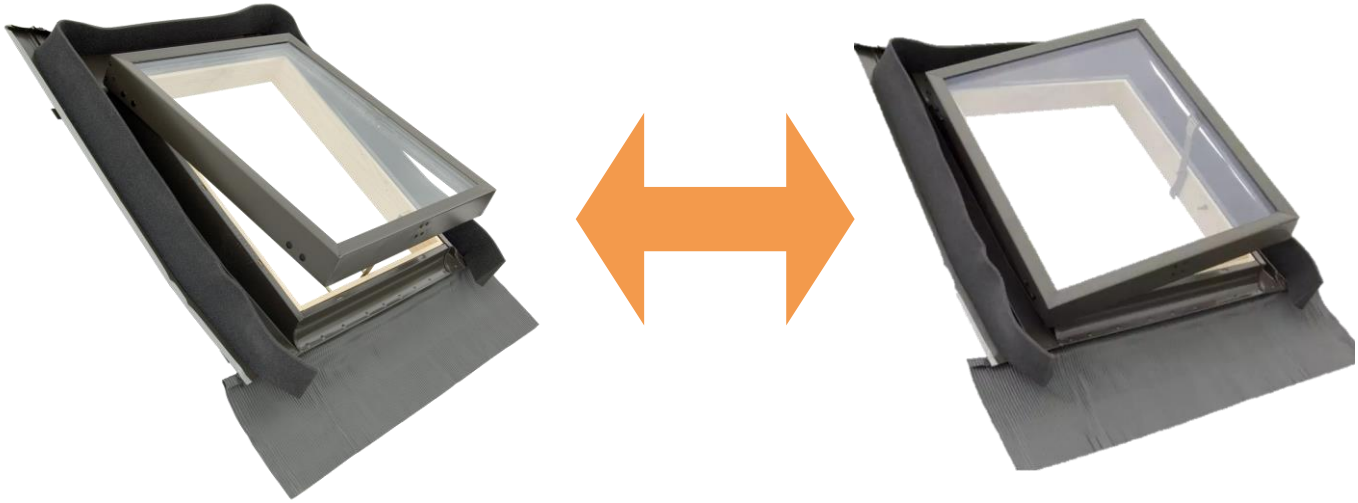

ⓘ The window sash is opening upwards but it can be removed and adjusted to opens sideways.

The roof exit window can be installed roofs with 20-60° roof pitch.